 


CHILDREN'S ELECTRIC POLICE CAR

2WD

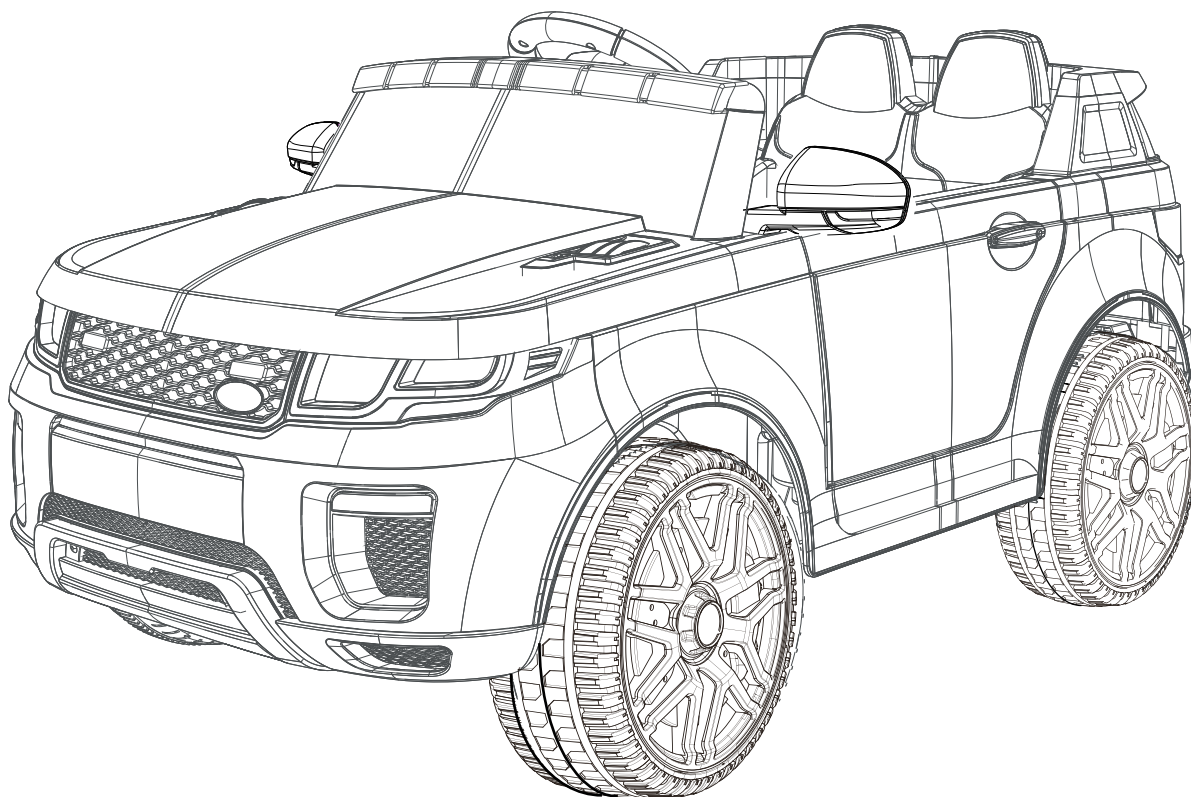

Product appearance and colors may vary from the photo.



**Please read the owner's
manual carefully.**



About Your New Ride-On

This Manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new electric ride-on toy. It is important for you to understand your new electric ride-on toy. By reading this manual before you let your child go out on his/her first ride, you will know how to get the most from your new electric ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

SPECIFICATIONS:

Battery:	12V4.5AhX1 or 12V7AhX1
Charger:	input: AC 100-240V / 50-60Hz output:DC12-15V
Suitable age:	3+ yrs
Load Capacity:	30kg
Speed:	2.5-3.5 km/h
Size of car:	108*70*54CM
Power way:	Charging type
Charge time:	8-10 hours


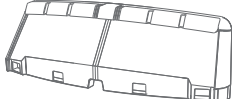
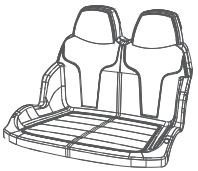
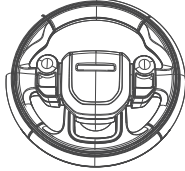
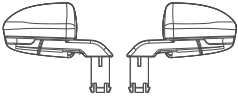

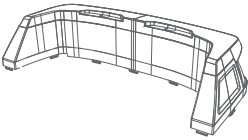
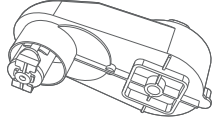
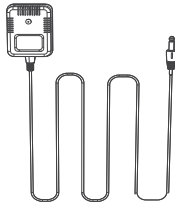
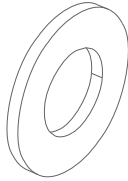
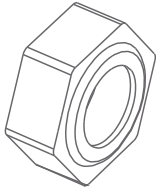




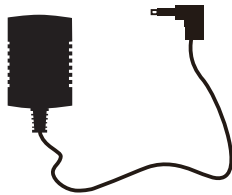
WARNING!

This toy must be assembled by an adult.



WARNING!

The remote control is not a toy, and is only allowed to be operated by adults.

PARTS LIST

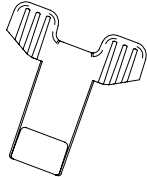PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS	PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS
1	Vehicle body		1		2	Windshield		1	
3	Seat		1		4	Steering wheel		1	
5	Rearview mirror		2	Left & Right	6	wheel		4	
7	Backrest		1		8	Gear box		2	
9	Charger		1		10	M 8 M 10 washer		2 4	Placed in the rear and front axle
11	M8 Nut		4	Installed on the rear and front axle	12	Wheel shaft cover		4	
13	Remote control		1		14	Spanner		2	
15	Manual		1		16	Mega-phone		1	

  
PARTS DIGRAM

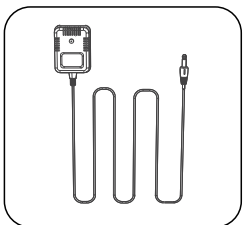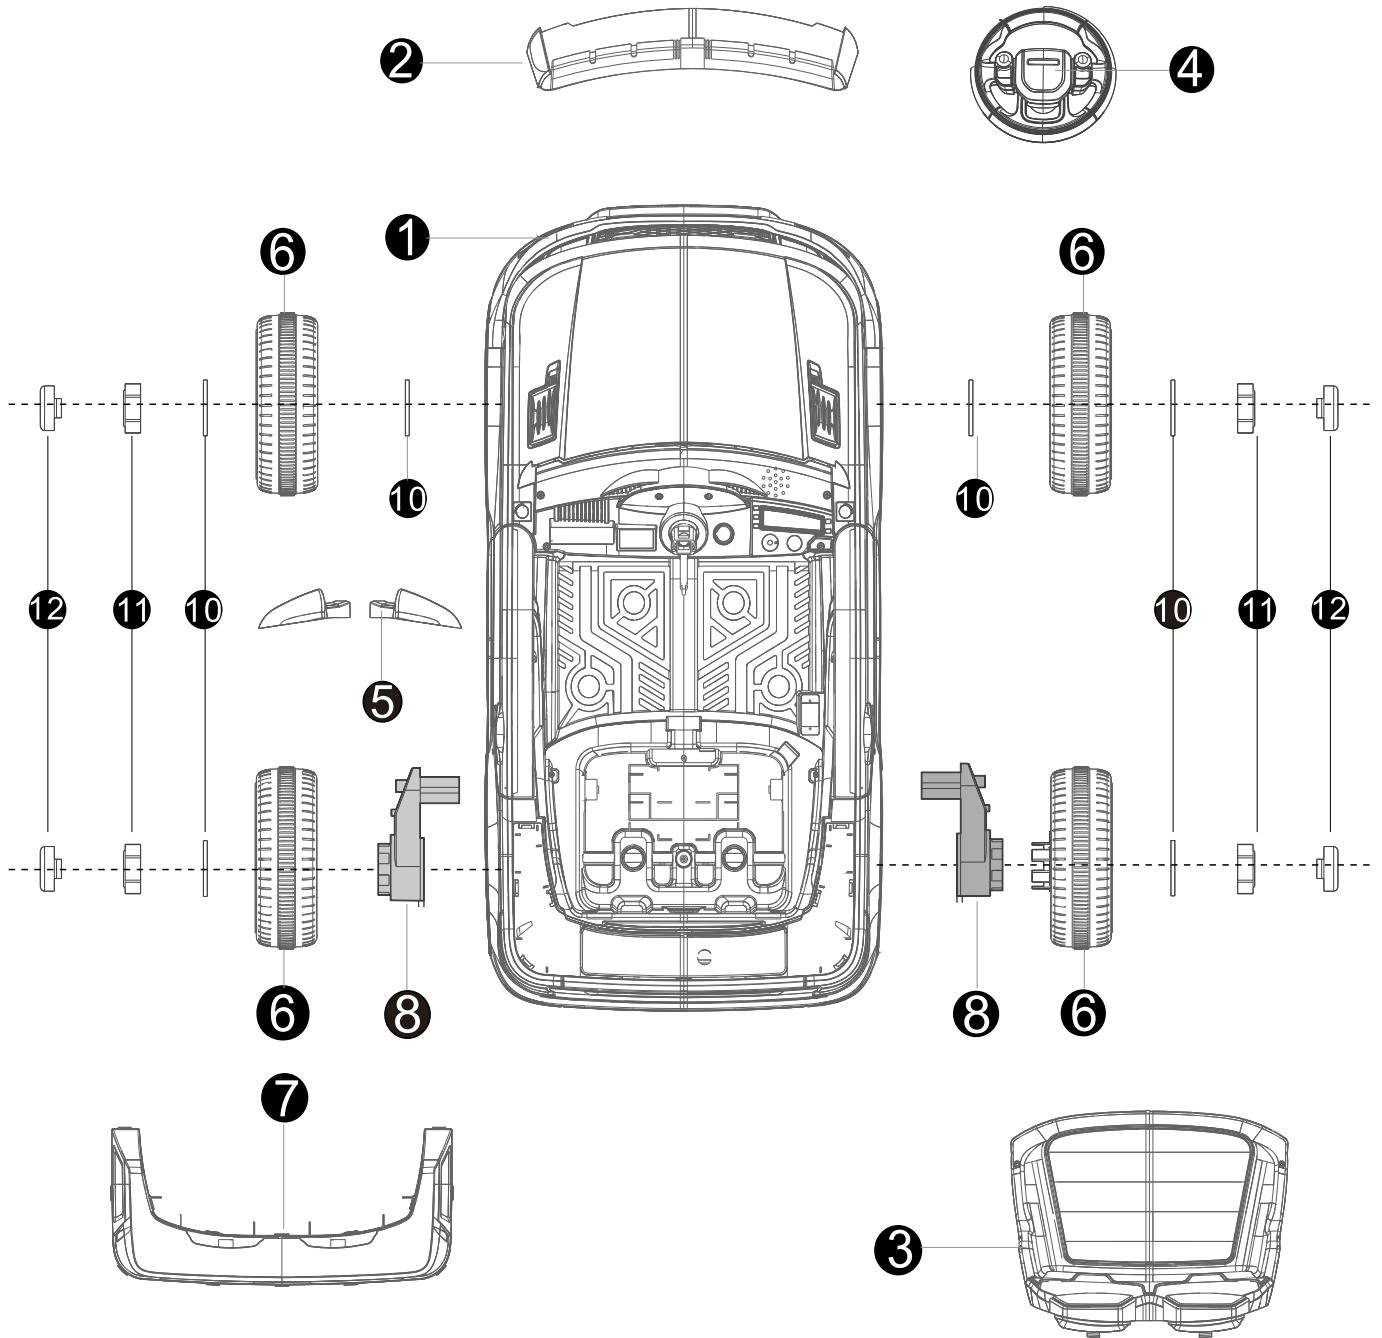

9



 
13

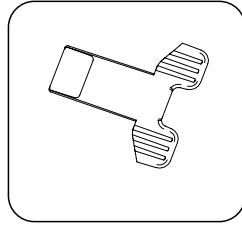

14



 15

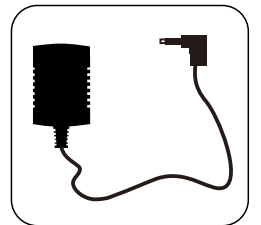


16

Assembly Instruction

1. Install the back wheel.

 - connect the motor power first
- Install drive motor on the rear axle
- Load a drive wheel on the rear axle
- Load a M8 washer on the rear axle
- Tighten M8 nuts with a plastic wrench
- Add a plastic wheel shaft cover

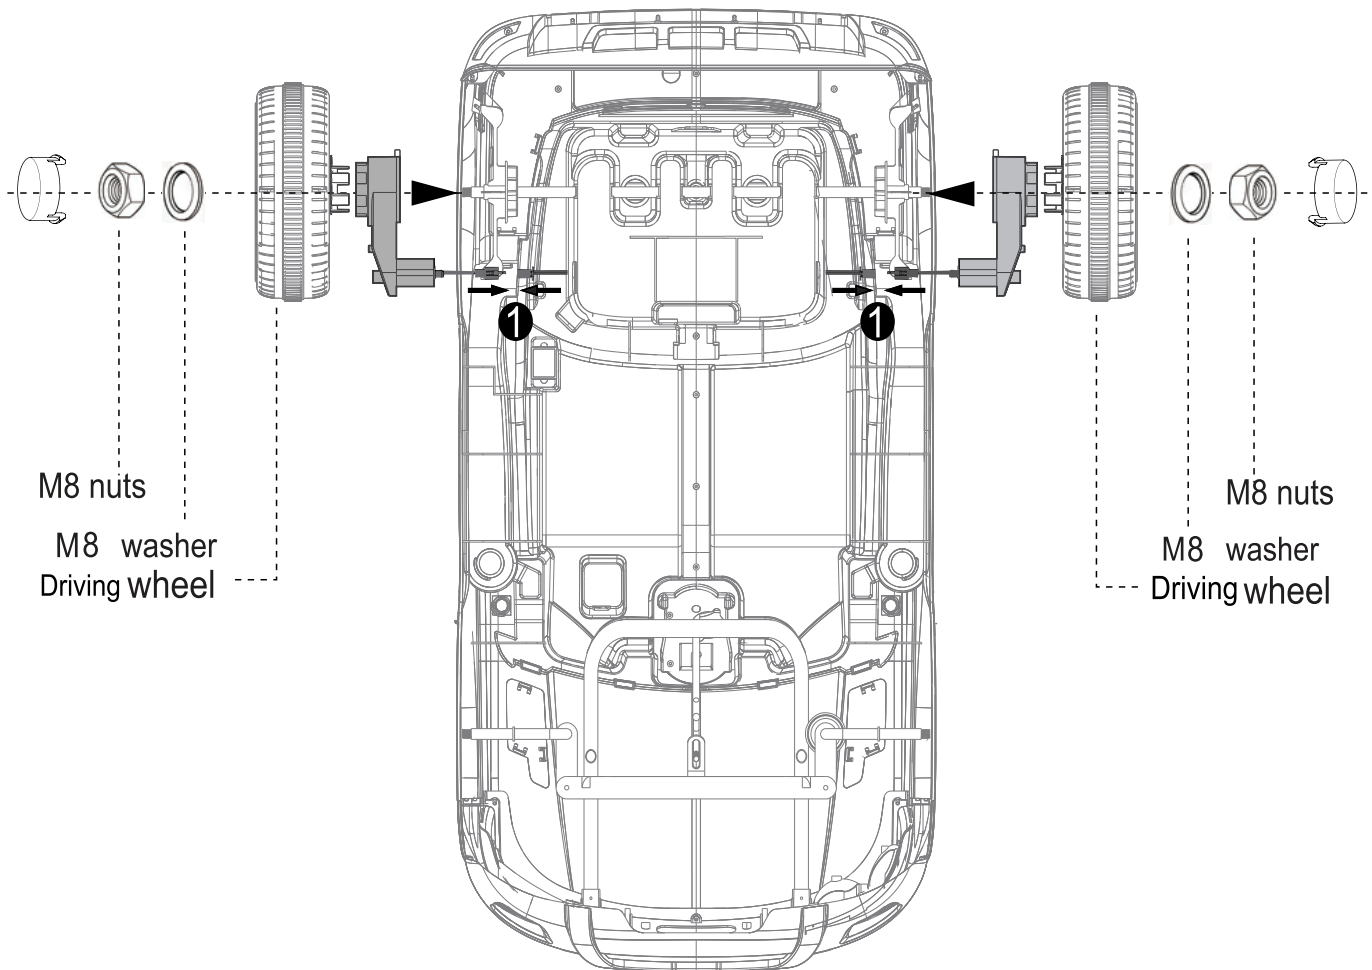


Note : both sides of the back wheel installation method is the same

Assembly Instruction

2. Install the front wheel.

 - Load a M8 washer on the front axle
- Add a wheel
- Load another M10 washer
- Tighten M8 nuts with a plastic wrench
- Add a plastic wheel shaft cover

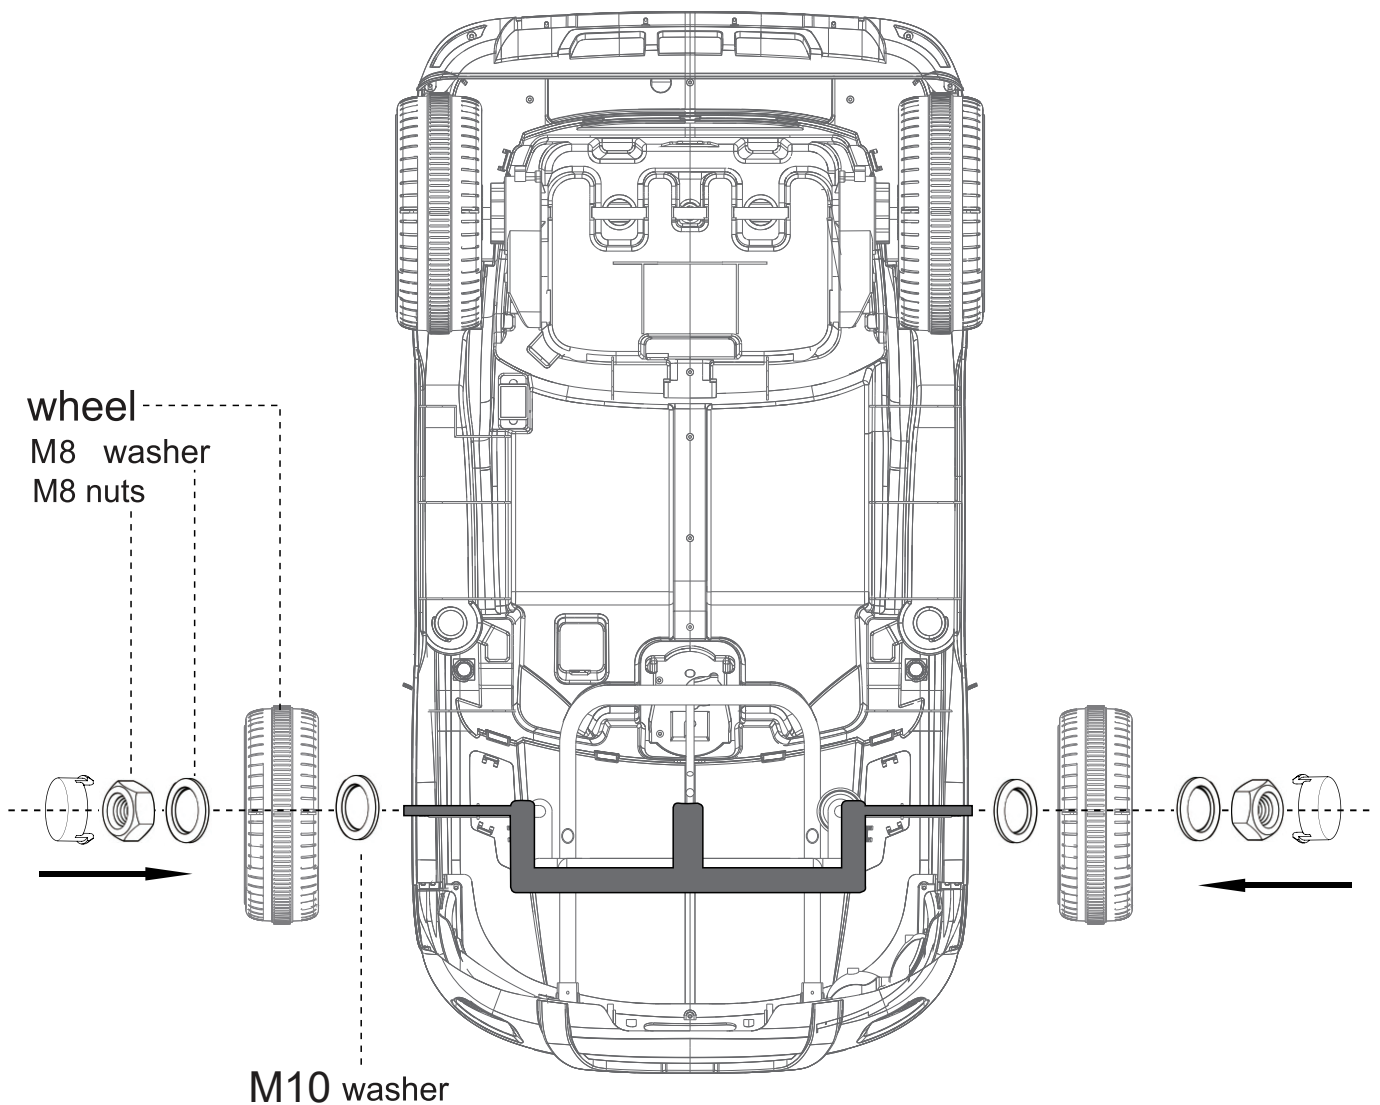


Note : both sides of the front wheel installation method is the same

Assembly Instruction



3. Install the backrest

 Put the backrest completely stuck on the body of the car

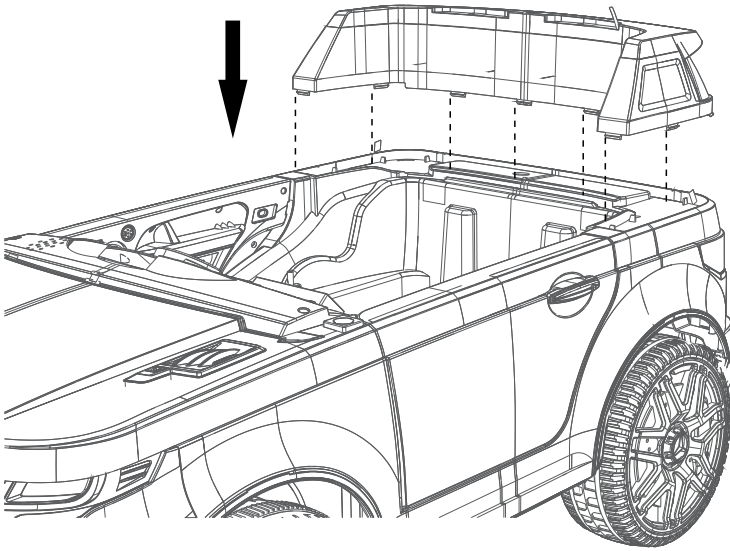


4. Install the Seat

  1

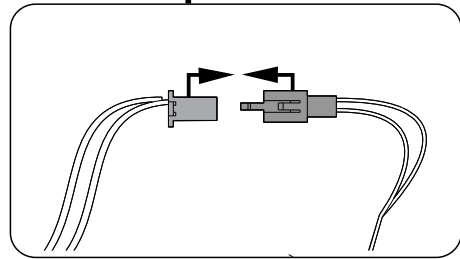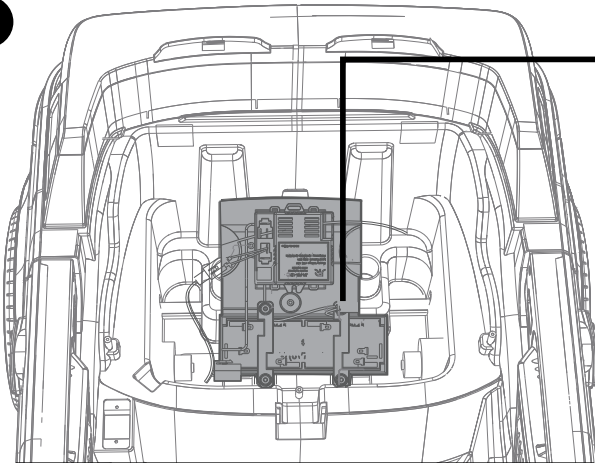


● Plug wire connector into the power connector as shown
Note: power plugs cannot be operated in reverse

 2 The back of the seat hook into the body of the card slot.

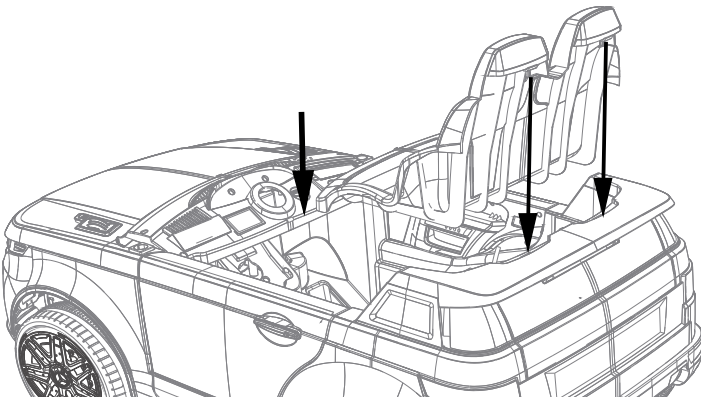

 3 Screw two M4 x 12 screw seats. (The screw is on the Vehicle body)

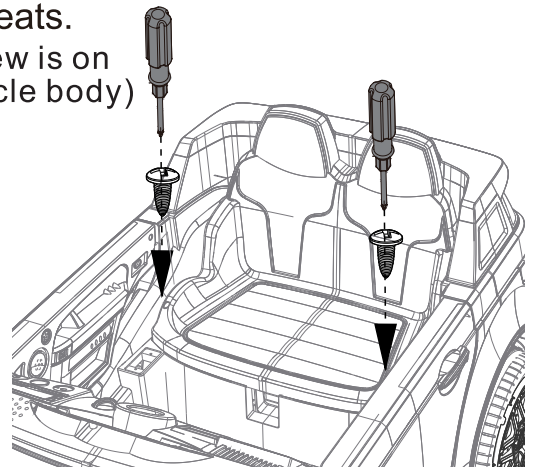


Assembly Instruction

5. Install the windshield

Install the windshield on the car.

 tip: Make sure that the cable is connected

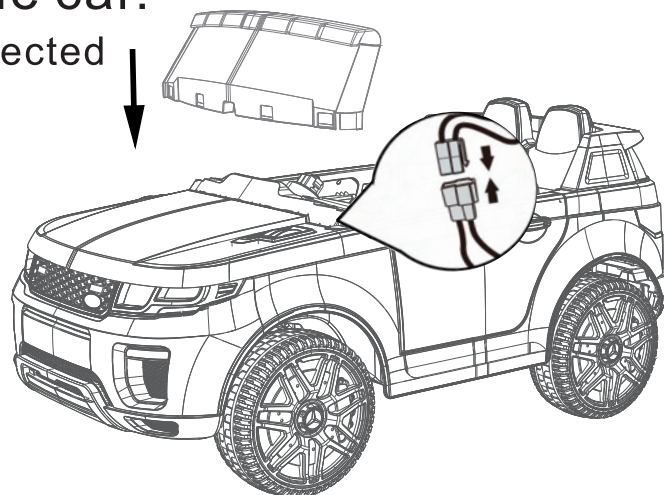


6. Install the steering Wheel

(1) Connect the plug-in of the steering wheel and the car.

(2) Turn on the car, test if the horn and music button on the steering wheel are working properly.


(3) If normal, be sure to tuck wires into the hole on the steering wheel, then snap the steering wheel into the steering base correctly until you can't bring it up.

 Note: Before installation, distinguish the front and rear positions of the steering wheel to avoid reverse installation.


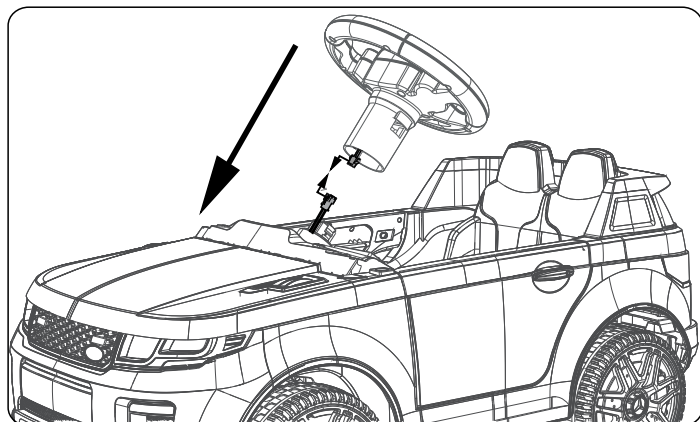


7. Install the rear view mirror

 
- Make sure of the right side for each viewfinder;
- Insert the rearview mirrors into the bodywork.

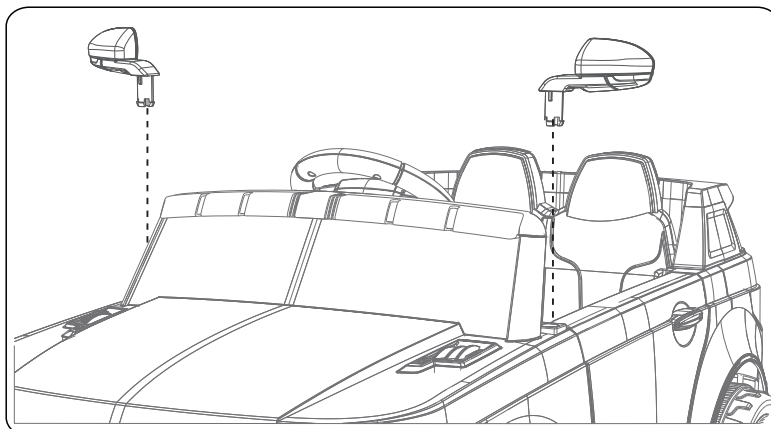

Use

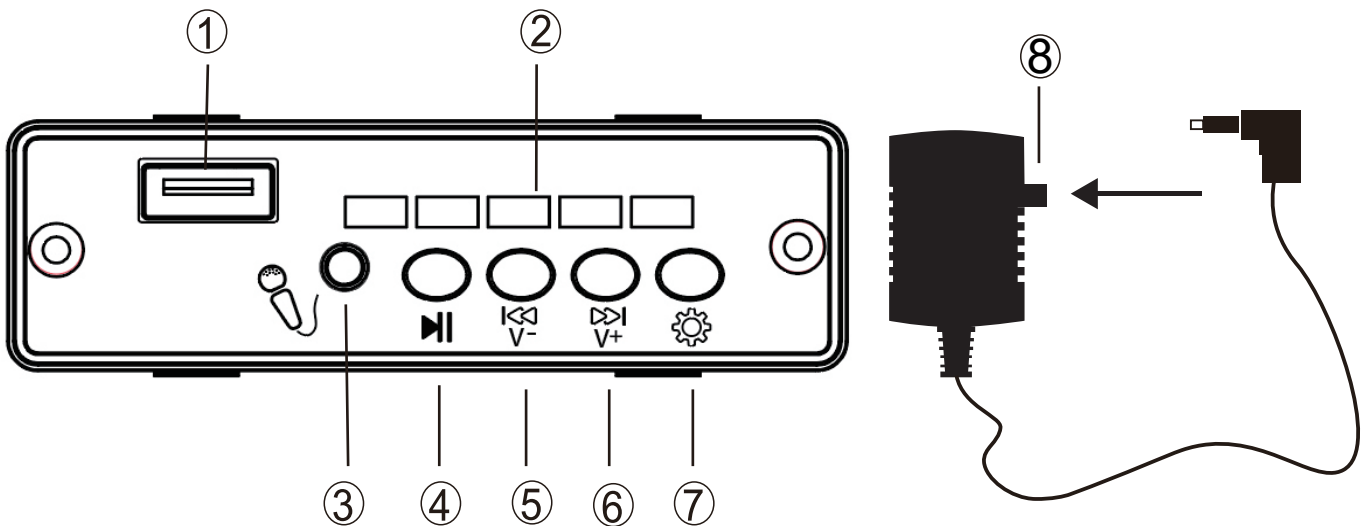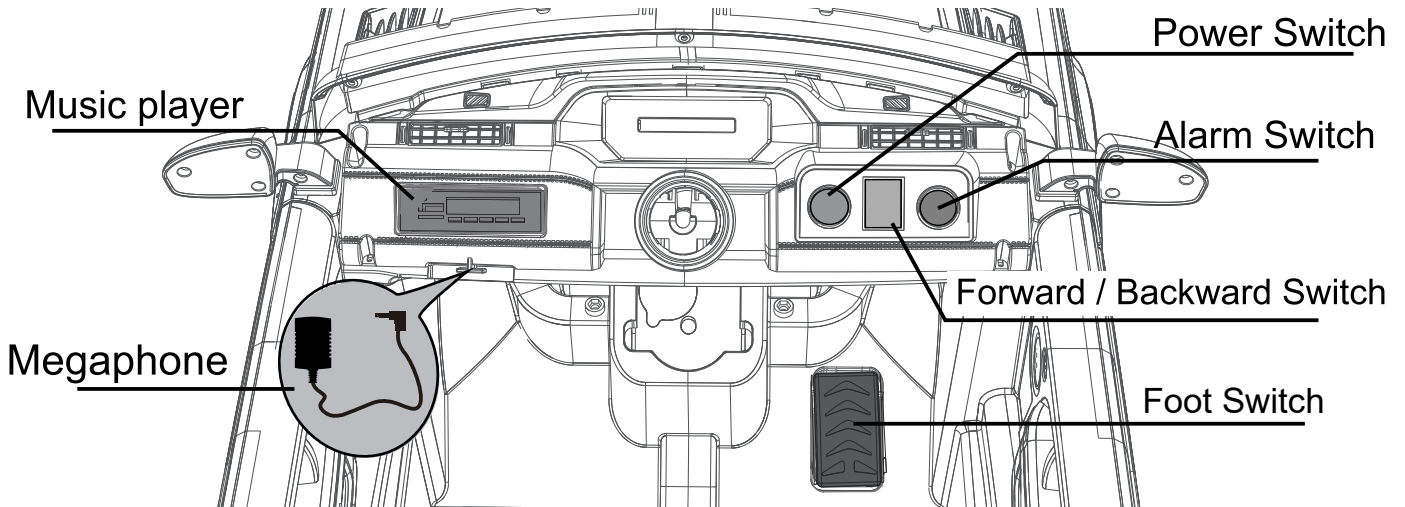  


- ① USB interface:insert USB terminal,connect audio source,can paly audio;
- ② Voltage display:the value on the display can be used to determine whether the battery
- ③ Spegaker socket:Plug the speaker into this interface,when the alarm switch turn on,
Press and hold the button NO.8 on the speaker,
You can speak through this speaker;
- ④ Pause button:touch this button,can pause the audio playing;
- ⑤ Volume-/music previous:short press,can play previous music,
long press can reduce the volume;
- ⑥ Volume+/music next:short press,can play next music,
long press can increase the volume;
- ⑦ Press this button to choose which device to play the source

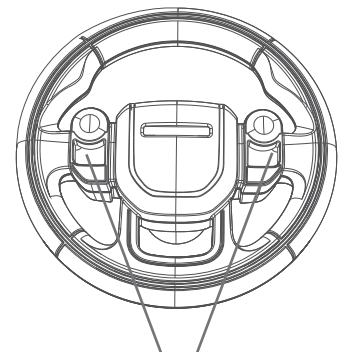 


Horn and Music button

Charging

 When the power display shows low power ,please charge the battery in time.
Find the charging input socket below the seat;
Plug the charger port into the input socket;
Plug the charger plug into a Socket on the wall.
The battery will begin charging.

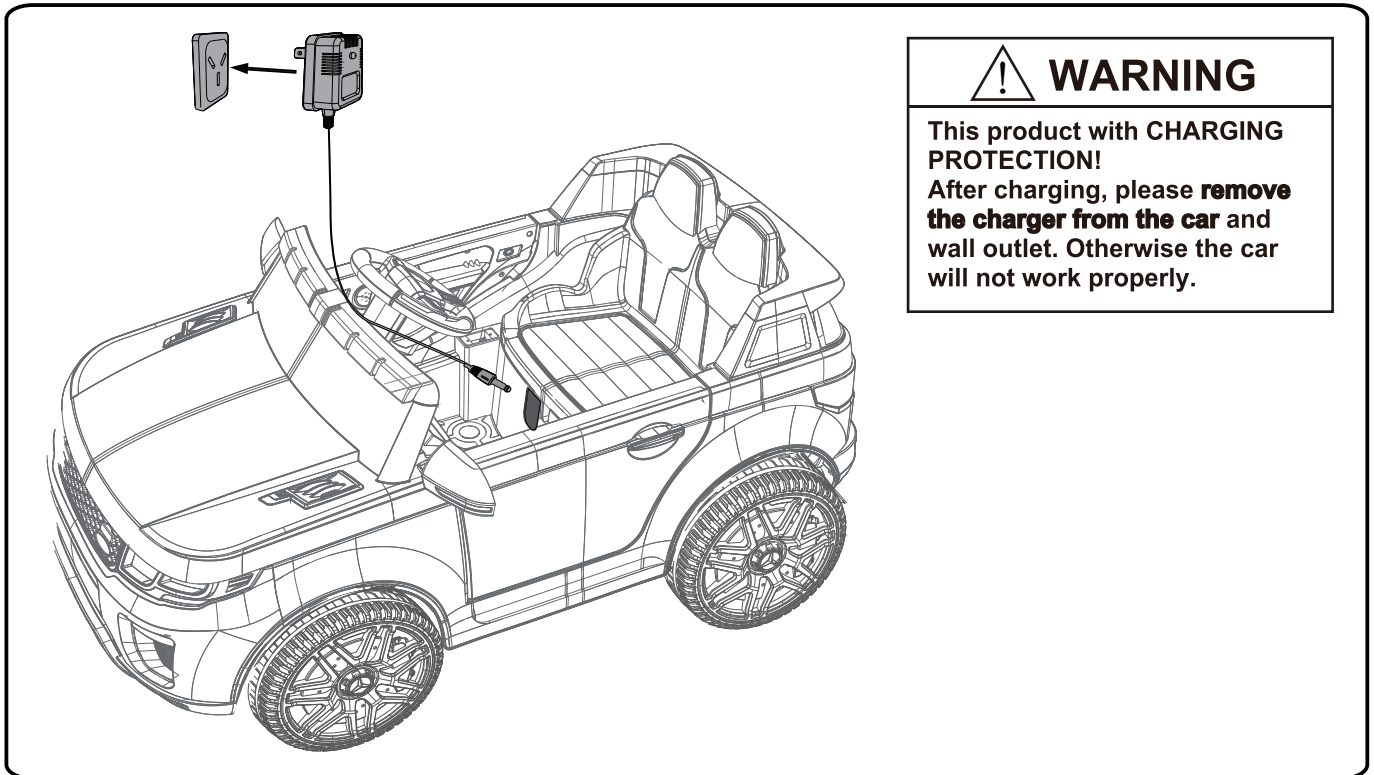

 NOTE:
this toy is only to be connected
to equipment bearing either of the
following symbols.

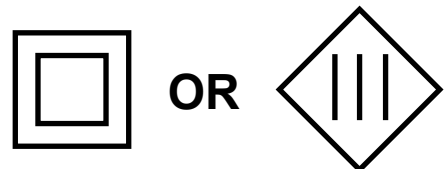

CHARGING PRECAUTIONS

Do not open the charger.Exposed wiring and circuitry inside may cause electric shock.
Only adults may handle or charge the battery.Never allow child to handle or charge the battery.Battery is heavy and contains lead acid.
Do not drop the battery.Permanent damage to the battery coule occur or cause serious injury.
Before charging the battery,check for wear or damage to the battery,charger,its suply cord and the connectors.Do not charge the battery if any damage to parts has occurred.
Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
Do not cahрге battery upside down.
Always secure the battery with the bracket.
Battery can fall out and injure a child if vehicle tips over.

Use

Remote Control Instructions

(1). Supply Voltage---DC 3.0V , Battery 2*1.5V AAA (not included)

(2). Frequency 2.407GHz-2.473GHz (Peak output power: 5dBm)

(3). Instructions

a. First time use need to match code, this product has memory function

Replace battery is unnecessary match code

b. Hold down “▲” & “▼” keys for 3 seconds start match code, The first LED flicker

c. Turn on the car body power now , The first LED lit up, Match code Success

d. Remoter 10 seconds not run will be standby ,Press any key wake up

e. Keys caption:“▲”Forward, “▼”Back, “◀”Left,
“▶”Right, “ S ”Speed, “ P ”Brake.

Press “ S ” key to set up speed ,

1 led lit up is low speed ,

 
 
 
2 leds lit up is medium speed ,

3 leds lit up is high speed ,

When backing up, there is only one slow speed

Press “ P ” key hold the brake, All LED flicker

※ The remote controller only can be used with adult's guidance

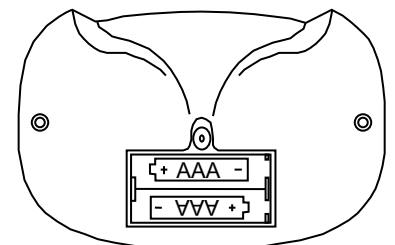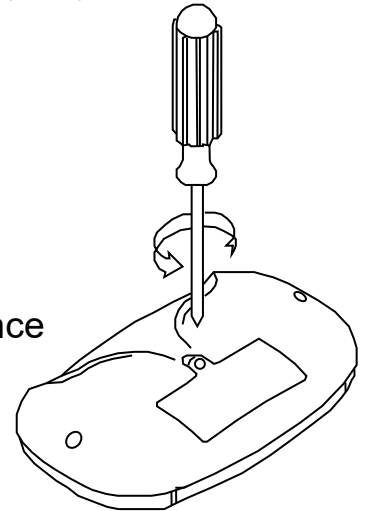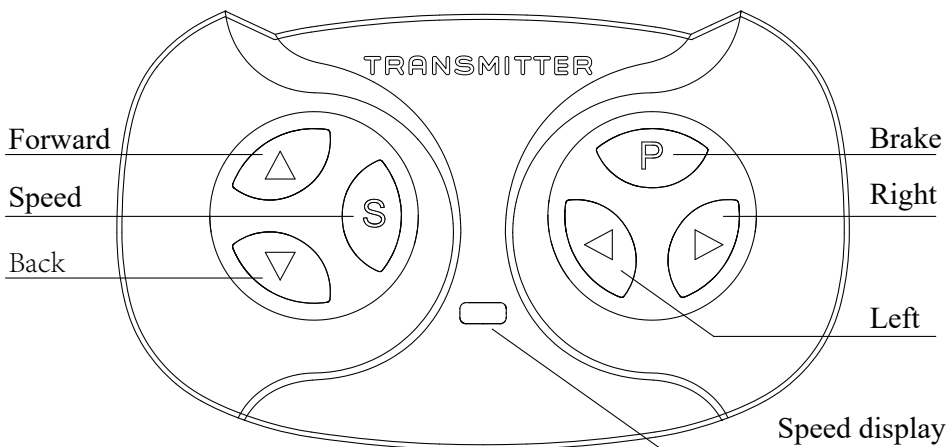


Battery Safety Warning

- Batteries can only be recharged under adult supervision.
- Rechargeable batteries should be removed from vehicle before charging. Different types of batteries or old and new batteries can not be combined. The battery should be placed in the correct polarity.
- Exhaust batteries should be removed from vehicle.
- Power terminals must not short-circuit.
- Dry batteries are not available.
- Non-rechargeable batteries are not to be recharged.

When the remote control is operated, the pedal switch of the product is invalid; when the remote control is cut off, the pedal switch can be used.

CHARGING WARNING

 CIRCUIT DIAGRAM

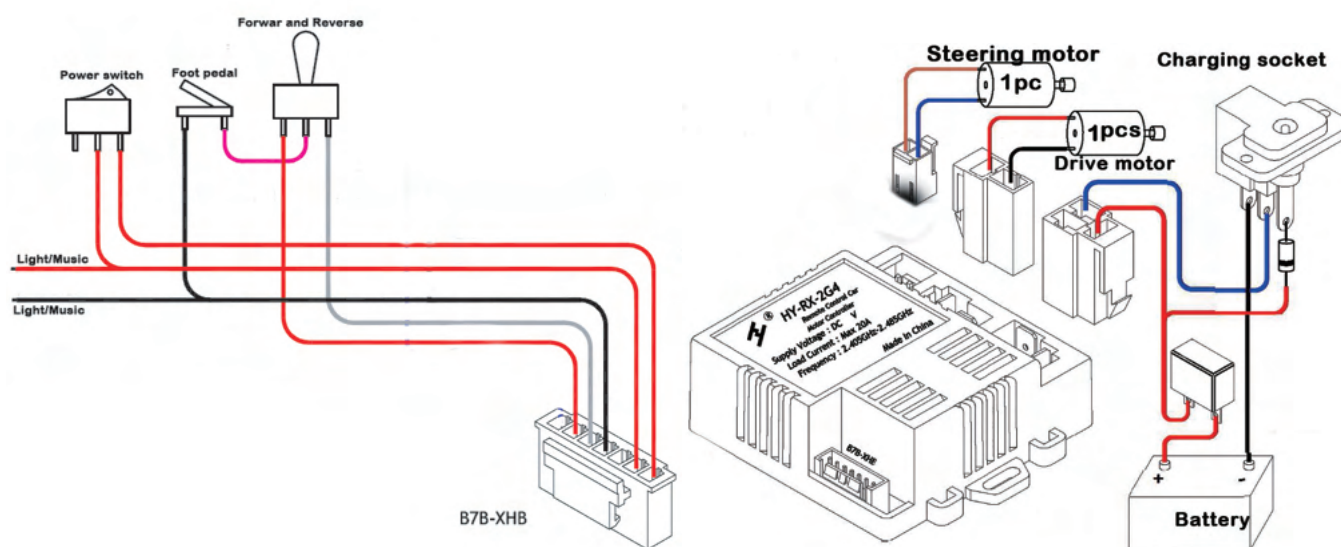

WARNING!

• **PREVENT FIRE AND ELECTRIC SHOCK:**

- Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock.
- Only adults may handle or charge the battery. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
- A recommendation for adult supervision of young children.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties

TROUBLESHOOTING GUIDE

 
■ **PROBLEM: The vehicle does not run**

PROBLEM CAUSE: The battery may low on power.

After each use, or once a month minimum, charge the battery for 8-12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Thermal fuse has tripped.

The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 5-20 seconds before becoming operational again. The self-resetting fuse is under the seat (Refer to the picture.)

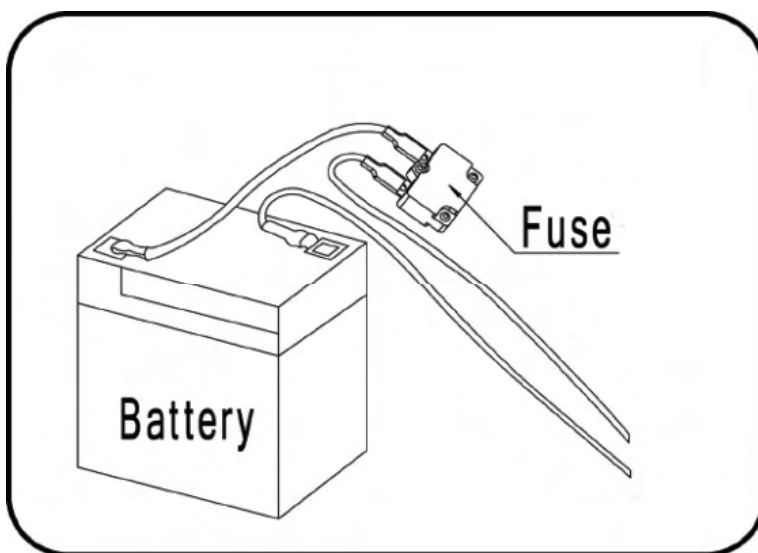

To avoid the fuse cut off the power, follow these guidelines:

- DO NOT overload the vehicle, Maximum weight The maximum weight see in the specification
- DO NOT tow anything behind the vehicle.
- DO NOT drive up steep slopes.
- DO NOT drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- DO NOT drive in very hot weather, components may overheat.
- DO NOT tamper with the electric system, Doing so may create a short circuit, causing the fuse to trip.

POSSIBLE CAUSE: Wheel nuts are loose.

If the nuts are not tight, the wheels will not engage the forward gears. Tighten the nut with the nut wrench.

POSSIBLE CAUSE: Battery connector or wires are loose.

Make Sure the battery connectors are firmly plugged in to each other.

POSSIBLE CAUSE: Battery is dead.

Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced.

POSSIBLE CAUSE: Electric system is damaged.

Water may have corroded the system, or loose dirt, gravel or sand might have jammed the switch.

POSSIBLE CAUSE: Motor is damaged.

The motor needs professional repair.

■ **PROBLEM: The battery will not recharge.**

POSSIBLE CAUSE: Battery connector or adapter connector is loose.

Make sure the battery connector and adapter connector are firmly plugged together.

POSSIBLE CAUSE: Charger is not plugged in.

Make sure the charger is plugged into the wall outlet and the power flow to the outlet is on.

POSSIBLE CAUSE: Charger is not working.

Is the charger warm while charging? If not, the charger may be broken and may need to be replaced.

TROUBLESHOOTING GUIDE

■ **PROBLEM: The vehicle does not run very long.**

POSSIBLE CAUSE: Battery may be undercharged.

You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 8 to 12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Battery is old.

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new One.

■ **PROBLEM: Battery buzzes or gurgles when charging.**

This is normal and not a cause for concern. It may also be silent when charging, which is also normal.

■ **PROBLEM: Charger feels warm when recharging battery.**

This is normal and not a cause for concern.

Maintaining Your Vehicle

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

DISPOSAL OF BATTERY

Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.
- The battery must be charged only by adult .Please charge the product before using!
- The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process.
- Any rechargeable battery must only be charged under adult's supervision.
- Battery charger shall regularly check the wires, plugs. casing and other parts for damage and found damage should stop using and restored.
- Open the battery cover on the remote control, and put two pieces of batteries,paying attention to batteries polarity. Replace the battery cover and lock with screws (please replace the battery according to the above steps and should be done by adult) .
- All batteries should be inserted with the correct polarity.
- Non-rechargeable battery should not be charged, please remove any running-off battery from the toy.
- Do not use old and new batteries together, or mix different types of batteries.
- The battery charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.

EXECUTION STANDARD :EN 71 EN62115 ASTM F963 CPSIA